



(b) Front view

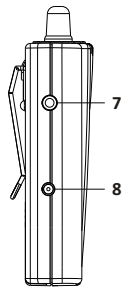

(c) Side view

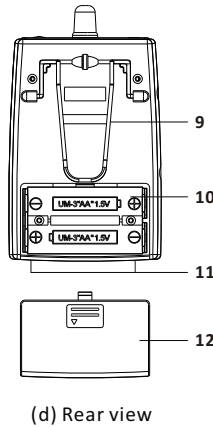

## ■ Illustration

1. Channel selector
2. Tx/Rx/Battery LED indicator
3. Power switch/Volume adjustment wheel
4. Battery LED indicator
5. Inbuilt microphone (Tx)
6. Microphone jack (Tx) ; Earphone jack (Rx)
7. Audio input jack, 3.5 mm (Tx) ; Audio output jack, 3.5 mm (Rx)
8. DC input jack
9. Belt clip
10. Battery compartment
11. Charging contacts
12. Battery door

## ■ Operation and Instructions

- Connect the microphone/earphone with the input jack (6).
- Make sure 2 AA batteries are inserted in the device (10).
- Turn the device on and adjust the volume at appropriate level (3).
- Green Tx LED indicator stands for effective transmission (2).
- Select advised channel (1).
- Green Rx LED indicator means successful receipt of messages from the transmitter (2).
- When the LED indicator at position (2) displays in red, please change or recharge batteries (10).
- If the battery is exhausted, the LED indicator at position (4) will display in red. Please change or recharge batteries immediately (10).
- To recharge batteries, place the device in compatible chargers.
- If the device will be operated in a place for long-term use, connect it with appropriate adapter (8) for direct power supply.
- Audio sources, including mp3, CD players and so on, can be connected with 3.5 mm audio input jacks on transmitters for further application (7).
- Amplification is available when 3.5 mm audio output jacks on receivers are connected with speakers or amplifiers (7).

## ■ Tips in Use

- Make sure both transmitter and receiver are on the same channel.
- While 2 or more groups are guided simultaneously, make sure distances among tour guides (transmitters) are over 10 meters to avoid interference.
- Make sure the device is switched off when it is employed by a charger.
- Do not recharge devices with non-rechargeable batteries.
- Remove batteries if the device will not be used for a long period of time.